



MP3 PLAYER
MP3-PLAY11/SD

ENGLISH INSTRUCTIONS

Package contents

- MP3 player
- USB cable
- Headphones
- Manual
- CD-ROM

Operating instructions

1. Play MP3 Music

1. Connect earphone to earphone jack.
2. Switch [HOLD ▶] to unlock position.
3. Long press [▶] button to enter into "MSC" mode.
4. Short press [▶] button to play music.

In play mode, short press [M] to enter into the sub menu and short press [▶] / [◀] button to select your desired mode (e.g. Repeat, Equalizer, 3D, Play Rate, Intro, Display, A-B, File Browse).

Short press [▶] to confirm.

To return to the main Menu: Short press [M] button when music is paused.

To Pause play: Short press [▶] button.

To resume play: Short press [▶] button again.

To change tracks: use [▶] / [◀] button.

To enter record mode: long press [R/V] button start to recording.

To switch between card and Flash: long press [M] button to switch NAND Flash/MMC Micro card.


To turn unit off: Long press [▶] button.

2. Other functions

To set Repeat, Equalizer, 3D, Play Rate, Intro, Display, A-B repeat or File Browse:

1. Select desired mode and short press [▶] button to enter into.
2. Short press [▶] / [◀] button to select your desired option (e.g. No Repeat, ONE, All, Random All, Dir Repeat, Dir All Repeat, Dir Random All if you are in the Repeat submenu)
3. Short press [▶] button to confirm.

3. Adding/ Removing MP3 Files

1. Plug the USB connector into computer
2. Add MP3 files to the USB storage's folder if you want to add files
3. Delete any MP3 files from the USB storage's folder if you want to remove files
4. Close the USB Storage's folder (right click on  icon).
5. Follow operating system guidelines for removal of the MP3 player
6. Disconnect the MP3 player from the computer.

4. Menu Navigation

- [M] button: Enter Main-Menu or Sub-Menu or return

NOTE: Long press [M] button to check the MMC card mode in the music, record and play record mode

 Display: MMC card mode  display: flash IC mode.

- Skip button ([▶] / [◀]): Shift menus.

- Play/Pause button ([▶]): Play, Pause, or confirm.

5. Adjust Volume

In MP3 Play, RPL mode or FM mode, short press [R/V] and short press [▶] / [◀] button to adjust the volume.

6. RPL (Record mode and Play the record mode)

1. In main menu, short press [▶] / [◀] button to select RPL mode.
2. Short press [▶] button to confirm.
3. Long press [R/V] button start to record.
4. Short press [▶] button to pause record.
5. Short press [R/V] button to save the record file.
6. Short press [▶] button to play the record.
7. Short press [M] button to enter into sub menu when play record mode(e.g. Repeat, Play Rate, Intro, Display, A-B, File Browse)
8. Short press [▶] button to confirm.
9. Long press [M] button to switch NAND Flash/MMC Micro card.

7. FM Radio (Optional function and only for MP3 player with "FM" function.)

1. Short press [M] button to enter main-Menu.
2. Short press [▶] / [◀] button to select "FM Radio" mode.
3. Short press [▶] button to enter "FM Radio" mode.
4. Short press [▶] / [◀] button to tune your desired stations.
5. Short press [▶] button to enter sub menu (e.g. Preset, Auto Search, Manual Search, Save, Exit)
6. Short press [▶] button to confirm.

7.1 Preset

1. Short press **[▶+]** / **[←◀]** button to select the preset stations.
2. If none preset station found, short press **[▶|]** button to enter sub menu (e.g. Preset, Auto Search, Manual Search, Delete, Delete all, Exit) to select "Auto Search" or "Manual search" mode to search the station then save.

Auto Search

Select 'Auto search' mode, the FM tuner will search stations automatically, short press **[▶|]** button to enter sub menu (e.g. Preset, Auto Search, Manual Search, Save, Save all, Exit)

Manual Search

Select 'Manual search' mode, press **[▶+]** / **[←◀]** to select the desired station frequency by 0.1MHz. Short press **[▶|]** button to enter sub menu (e.g. Preset, Auto Search, Manual Search, Save, Exit)

7.2 Save

1. Select your desired band
2. Short press **[▶|]** button to enter into sub menu to select "Save" mode
3. Short press **[▶|]** button to enter into and short press **[▶+]** / **[←◀]** button to select your desired save number (Only save 30 bands)
4. Short press **[▶|]** button to save.
Record FM

In the FM radio mode, long press **[R/V]** button to enter record mode, press **[R/V]** button to exit the FM record mode to enter Play mode for playback of the recorded file.

8. SYS (system)

1. In main menu, short press **[▶+]** / **[←◀]** button to select "SYS" mode
2. Short press **[▶|]** button to enter
3. Press **[▶+]** / **[←◀]** to choose your desired mode (e.g. USB Mode, Time, Power, Language, Display, Sys Tools, Storage)
4. Short press **[▶|]** button to confirm.

9. USB Mode:

Short press **[▶+]** / **[←◀]** button to select USB Mode

10. Time:

Short press **[▶+]** / **[←◀]** button to select Time (Adjust, Alarm, Time Zone)

Adjust Time: Short press **[M]** button to select YY-MM-DD and the time options, and short press **[▶+]** / **[←◀]** button to adjust the time.

11. Display:

Short press **[▶+]** / **[←◀]** button to select Contrast or Backlight. Short press **[▶+]** / **[←◀]** button to select your desired number.

12. Sys Tools:

1. Short press **[▶+]** / **[←◀]** button to select your desired option.(e.g. Del File, Format, Reset, System Info.)
2. Short press **[▶+]** / **[←◀]** button to select "Format" mode and short press **[▶|]** button to enter
3. Short press **[▶|]** button to enter into sub menu(e.g. Quick, Complete)
4. Short press **[▶+]** / **[←◀]** button to select your option and short press **[▶+]** / **[←◀]** button to select "Yes/NO"
5. Short press **[▶|]** button to confirm.
6. Select "Reset" mode and short press **[▶|]** button to confirm. Short press **[▶+]** / **[←◀]** button to select "Yes/NO"
7. Select "System Info" mode and short press **[▶+]** / **[←◀]** button to look "FW, CHIP and FREE"

13. Storage:

1. Short press **[▶+]** / **[←◀]** button to select your desired option (e.g. Internal, MMC Micro)
2. Short press **[▶|]** button to confirm ("Checking..." display to check the storage)

Safety precautions:

To reduce risk of electric shock, this product should ONLY be opened by an authorized technician if service is required. Disconnect the product from mains and other equipment if a problem should occur.

Warranty:

No guarantee or liability can be accepted for any changes and modifications of the product or damage caused due to incorrect use of this product.

General:

Designs and specifications are subject to change without notice.